

HANNspree

Service Handbook

By Product



JT02-37E1-000G

Version 1.0 2006/11/20



Table of Contents

1. Product Disassembly SOP

- 1-1 Rear Cover and Stand Disassembly
- 1-2 Shielding and IO Cover Disassembly
- 1-3 Power Board Disassembly
- 1-4 Main Board Disassembly
- 1-5 Speakers Disassembly
- 1-6 Stand Bracket Disassembly
- 1-7 IR Board and Power Button Board Disassembly
- 1-8 Function Board Disassembly
- 1-9 Front Bezel Disassembly
- 1-10 Panel Bracket Disassembly

2. Connection Diagram

3. Appendix



1. Product Disassembly SOP

1-1 Rear Cover and Stand Disassembly

Operation Procedure

1. Loosen 16 screws from Rear Cover (Fig.1).
2. Loosen 4 screws from Stand, then remove the Stand (Fig.2).
3. Remove the Rear Cover.



Fig.1



Fig.2

1-2 IO Cover and Shielding Disassembly

Operation Procedure

1. Loosen 3 screws from IO Cover, then remove the IO Cover (Fig.1).
2. Loosen 18 screws from Shielding and brackets, then remove the Shielding and brackets (Fig.2).



Fig.1

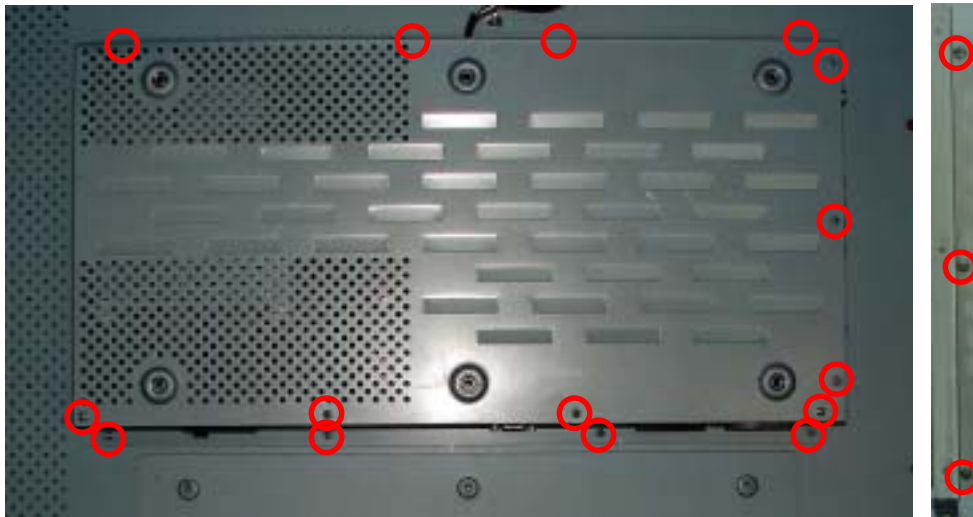


Fig.2

1-3 Power Board Disassembly

Operation Procedure

1. Disconnect all wires from Power Board (Fig.1).
2. Loosen 6 screws from Power Board then remove it (Fig.1).

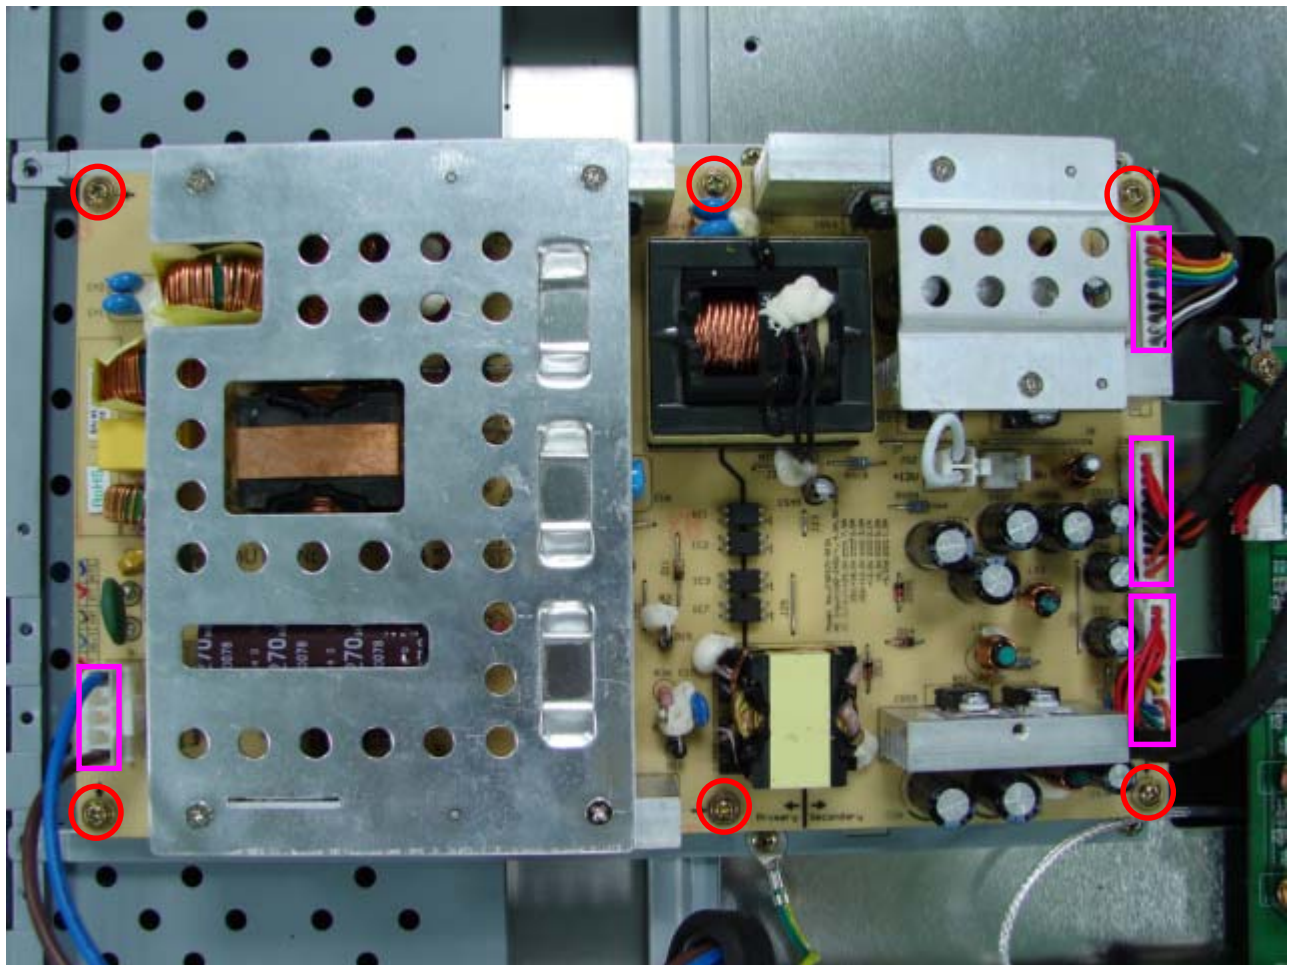


Fig.1

1-4 Main Board Disassembly

Operation Procedure

1. Disconnect all wires from Main Board, loosen 6 screws from Main Board then remove it ([Fig.1](#)).

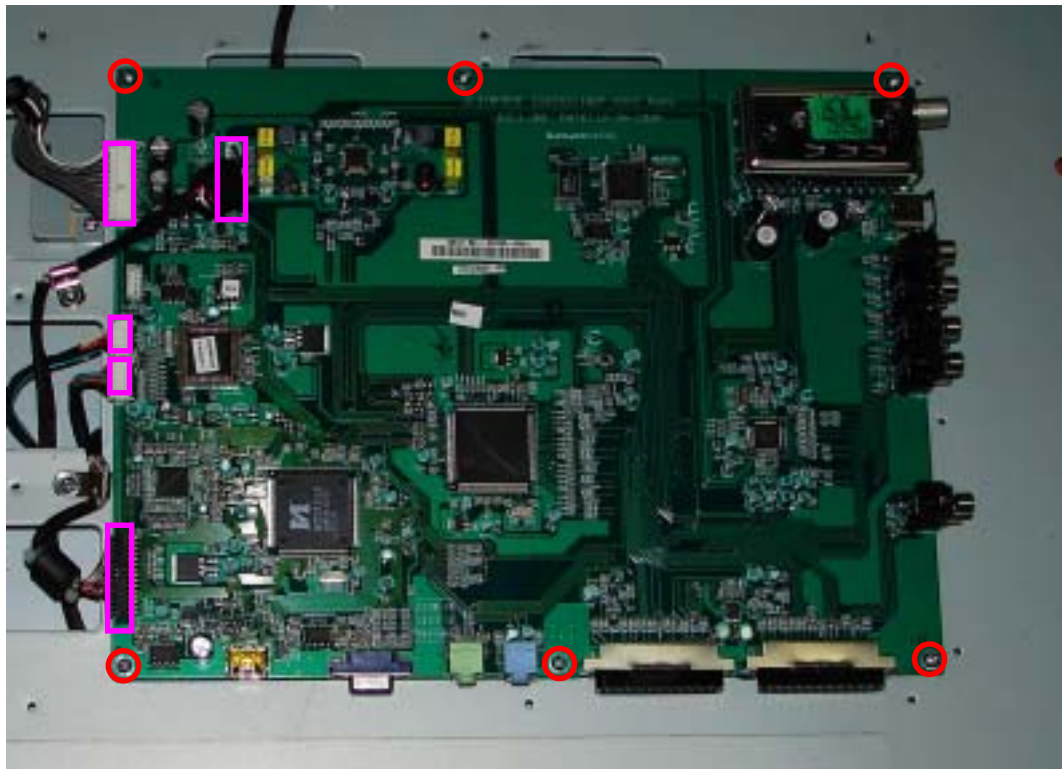


Fig.1



1-5 Speakers Disassembly

Operation Procedure

1. Loosen 8 screws from left/right speakers, then remove them ([Fig.1](#)).

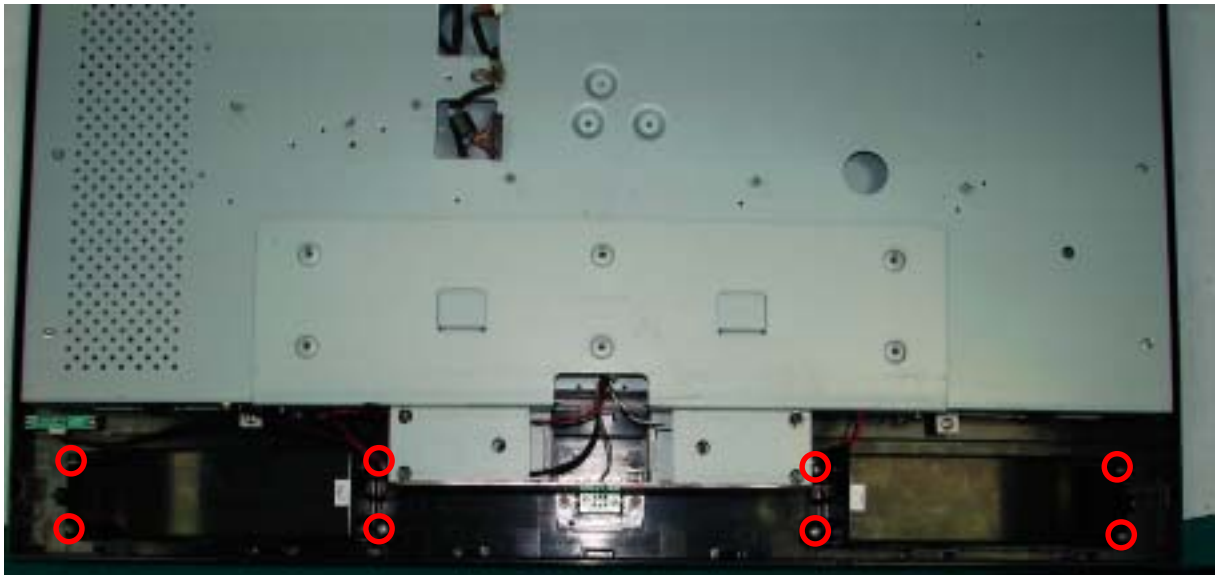


Fig.1



1-6 Stand Bracket Disassembly

Operation Procedure

1. Loosen 2 screws from Stand Bracket then remove it ([Fig.1](#)).



[Fig.1](#)



1-7 IR Board and Power Button Board Disassembly

Operation Procedure

1. Remove all wires from IR Board and Power Button Board.
2. Loosen 4 screws from IR Board and Power Button Board, then remove them ([Fig.1](#)).



Fig.1

1-8 Function Board Disassembly

Operation Procedure

1. Loosen 2 screws from keypad module, loosen 1 screw from wire (Fig.1).
2. Disconnect the wire, loosen 2 screws from Function Board (Fig.2).

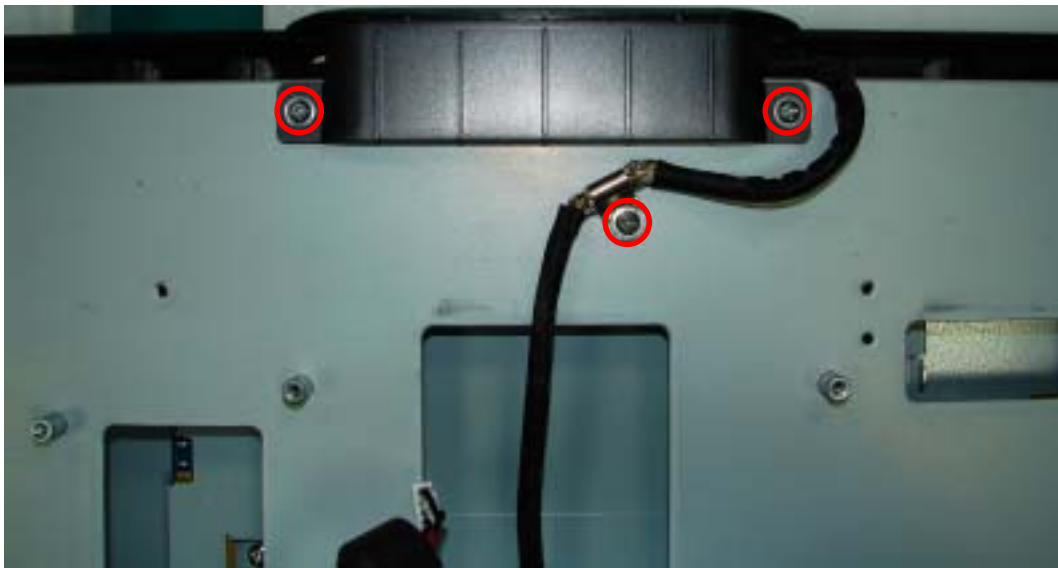


Fig.1

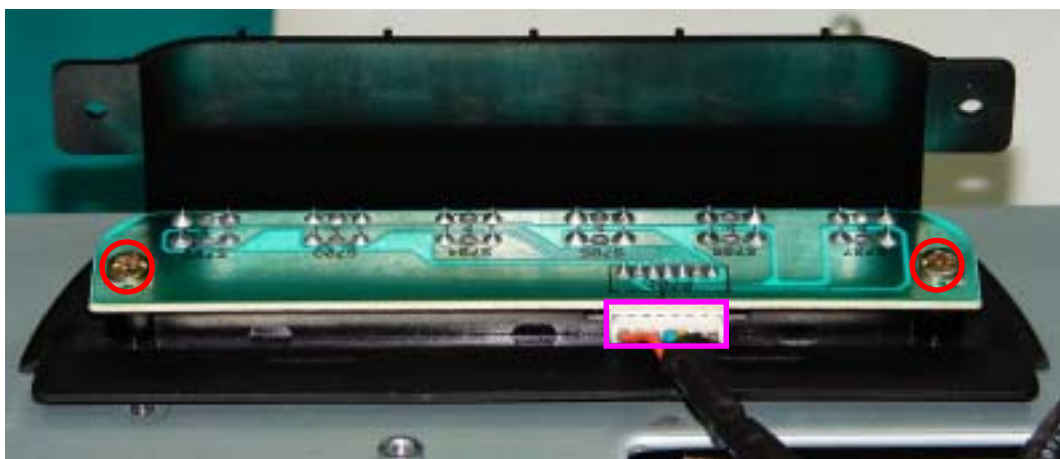


Fig.2



1-9 Front Bezel Disassembly

Operation Procedure

1. Loosen 6 screws from Panel Bracket, then remove the Front Bezel ([Fig.1](#)).

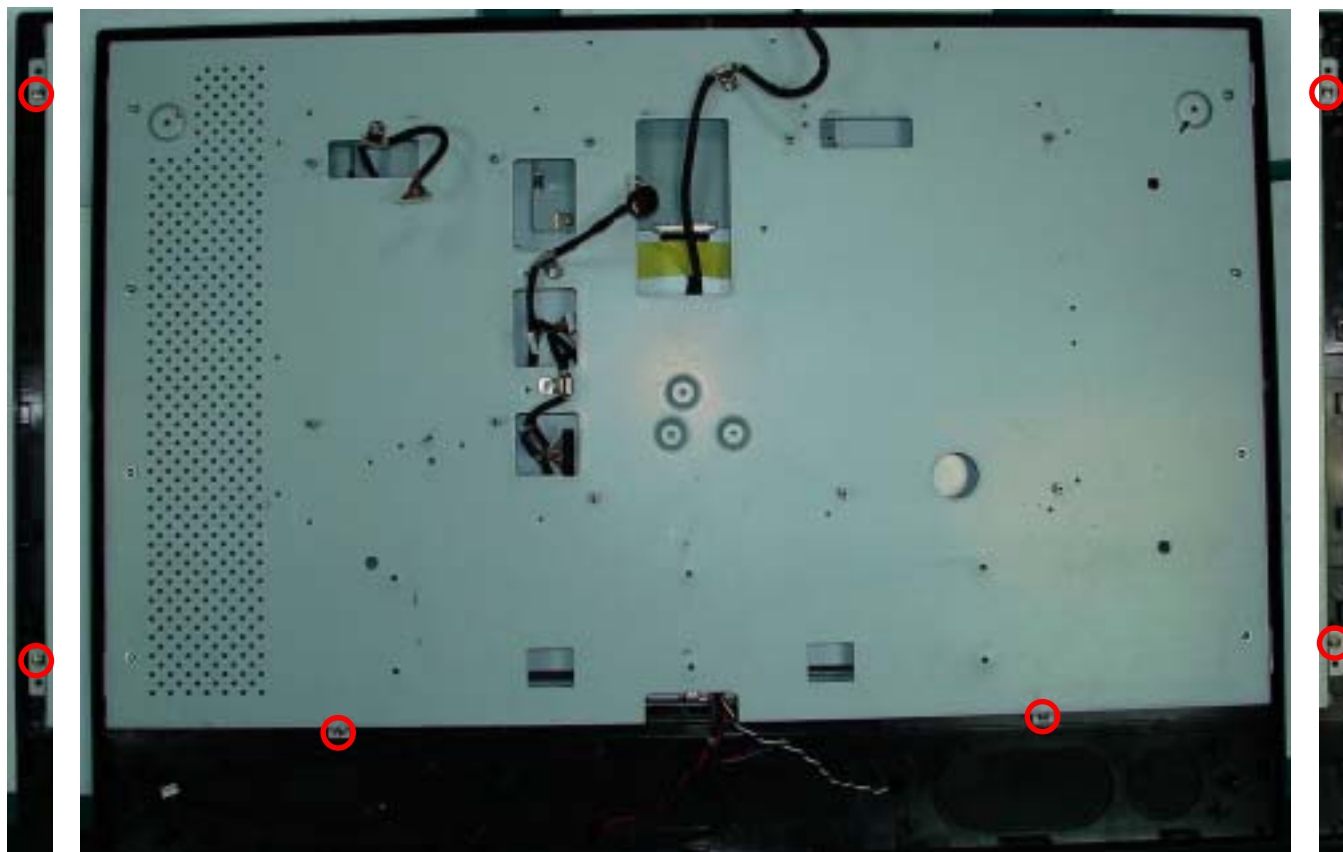


Fig.1

1-10 Panel Bracket Disassembly

Operation Procedure

1. Loosen 10 screws from Panel Bracket (Fig.1).
2. Loosen 14 screws from Panel (Fig.2).

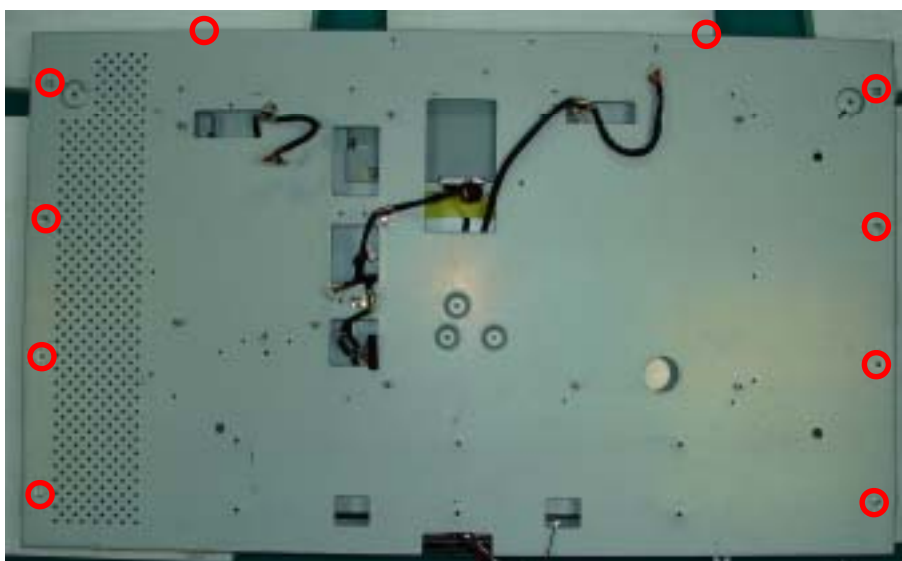


Fig.1


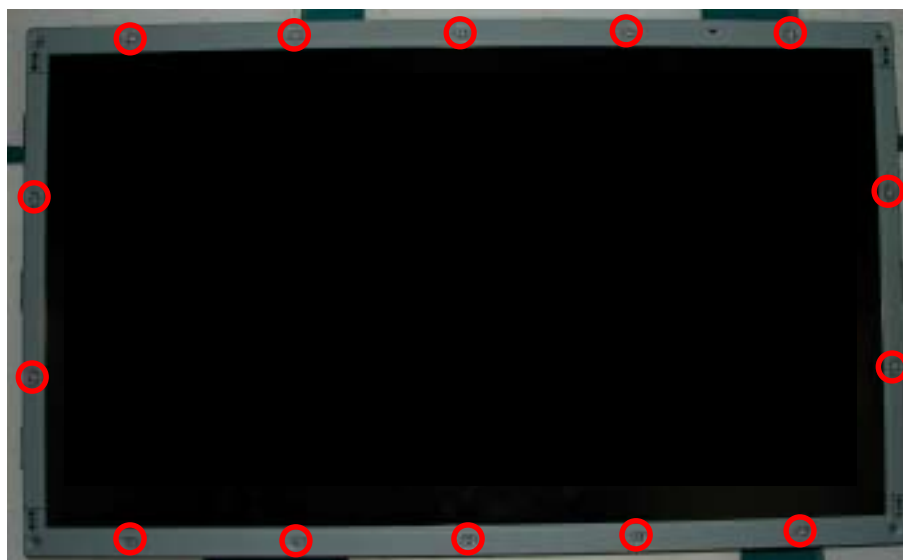


Fig.2

2. Connection Diagram



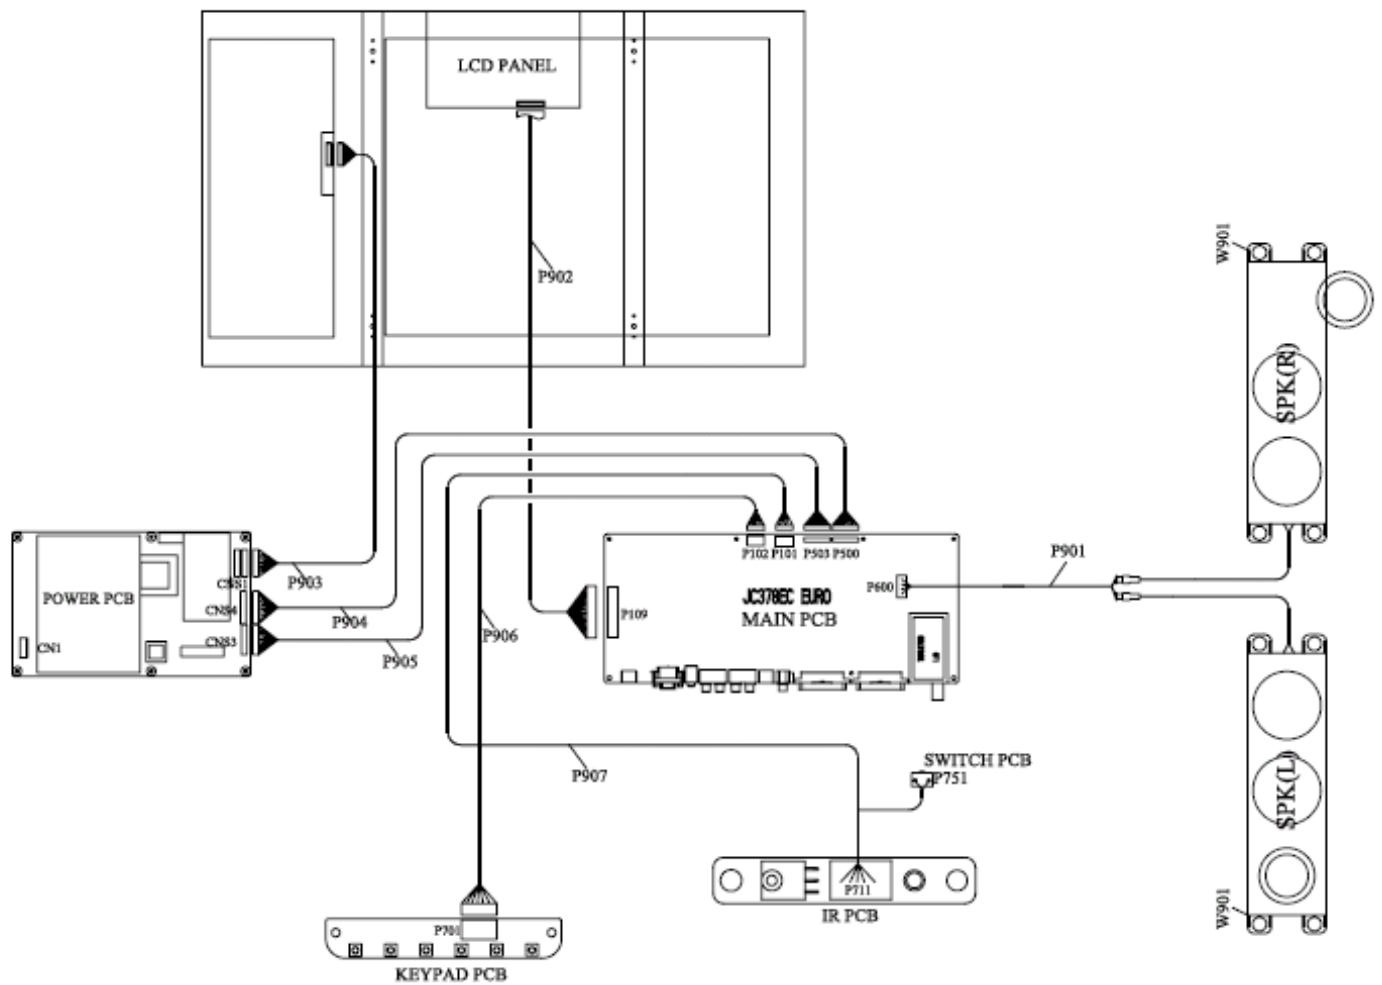

3. Appendix